


**Technical Support**

 **01273 811011**



[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

This USB dongle enables Paxton PC software to exchange data with Paxton devices that communicate using Net2Air wireless technology.

Plug the device into a spare USB port on the PC. Open or restart any Paxton applications and the dongle will register automatically in the software.

**Net2 nano** - The Net2 Server Configuration Utility/Net2Air Bridge tab will display a USB bridge with a fixed IP.

**Proximity LCD reader** - Close down any other Net2 applications including the Net2 server to avoid any program conflicts. Run the LCD reader image uploader software and it will display any LCD units that are in range of the dongle.

For further information, please refer to the following documentation as necessary.

*Ins-30091 - Proximity LCD reader* < <http://paxton.info/985> >

*Ins-30084 - Net2Air USB bridge* < <http://paxton.info/926> >

Download the latest version of Net2 software at: <http://paxton.info/1438> before commissioning this product.


<b>Specifications</b>			
<b>System Specification</b>	Min	Max	
ACU's per Net2Air bridge - Recommended	1	10	
Net2Air USB bridge per system		1	
Carrier frequency			2.405 GHz
Net2Air wireless range		5 m	
<b>Electrical</b>	Min	Max	
Voltage	4.75 V	5.25 V	USB certified
Current		100 mA	
<b>Environment</b>	Min	Max	
Operating temperature	0 °C	55 °C	
Waterproof			No
<b>Dimensions</b>	Width	Height	Length
	23 mm	14 mm	82 mm

This product is not suitable for retail sale. All warranties are invalid if this product is not installed by a competent person.

**CE0889**

The declaration of conformity is available on request. Contact details are provided at: <http://paxton.info/596>

**Technical Support**

 01273 811011



[support@paxton.co.uk](mailto:support@paxton.co.uk)

Technical help is available: Monday - Friday from 07:00 - 19:00 (GMT)  
Saturday from 09:00 - 13:00 (GMT)

Documentation on all Paxton products can be found on our website - <http://www.paxton.co.uk/>

This USB dongle enables Paxton PC software to exchange data with Paxton devices that communicate using Net2Air wireless technology.

Plug the device into a spare USB port on the PC. Open or restart any Paxton applications and the dongle will register automatically in the software.

**Net2 nano** - The Net2 Server Configuration Utility/Net2Air Bridge tab will display a USB bridge with a fixed IP.

**Proximity LCD reader** - Close down any other Net2 applications including the Net2 server to avoid any program conflicts. Run the LCD reader image uploader software and it will display any LCD units that are in range of the dongle.

For further information, please refer to the following documentation as necessary.

*Ins-30091 - Proximity LCD reader* < <http://paxton.info/985> >

*Ins-30084 - Net2Air USB bridge* < <http://paxton.info/926> >

Download the latest version of Net2 software at: <http://paxton.info/1438> before commissioning this product.

<b>Specifications</b>			
<b>System Specification</b>	Min	Max	
ACU's per Net2Air bridge - Recommended	1	10	
Net2Air USB bridge per system		1	
Carrier frequency			2.405 GHz
Net2Air wireless range		5 m	
<b>Electrical</b>	Min	Max	
Voltage	4.75 V	5.25 V	USB certified
Current		100 mA	
<b>Environment</b>	Min	Max	
Operating temperature	0 °C	55 °C	
Waterproof			No
<b>Dimensions</b>	Width	Height	Length
	23 mm	14 mm	82 mm

This product is not suitable for retail sale. All warranties are invalid if this product is not installed by a competent person.

**CE0889**

The declaration of conformity is available on request. Contact details are provided at: <http://paxton.info/596>