

# LCD Reader image upload

To upload new images to your LCD reader you will need a Net2Air USB dongle or Net2Air USB bridge



Download the free LCD reader image uploader software at:  
<http://paxton.info/1521>

Sales code: 477-268  
Description: Net2Air USB bridge  
<http://paxton.info/1382>



Sales code: 380-592  
Description: Net2Air USB Dongle  
<http://paxton.info/1523>



# LCD Reader image upload

To upload new images to your LCD reader you will need a Net2Air USB dongle or Net2Air USB bridge



Download the free LCD reader image uploader software at:  
<http://paxton.info/1521>

Sales code: 477-268  
Description: Net2Air USB bridge  
<http://paxton.info/1382>



Sales code: 380-592  
Description: Net2Air USB Dongle  
<http://paxton.info/1523>

